


Transmission	A	B	C	D	E	Notes
Power Glide	25 <sup>23</sup> / <sub>64</sub> "	16 <sup>5</sup> / <sub>16</sub> "	20 <sup>9</sup> / <sub>16</sub> "	3 <sup>3</sup> / <sub>4</sub> "	19"	Short shaft
Power Glide	27 <sup>9</sup> / <sub>16</sub> "	16 <sup>5</sup> / <sub>16</sub> "	20 <sup>9</sup> / <sub>16</sub> "	3 <sup>3</sup> / <sub>4</sub> "	19"	Long shaft
TH350	27 <sup>11</sup> / <sub>16</sub> "	21 <sup>5</sup> / <sub>8</sub> "	20 <sup>3</sup> / <sub>8</sub> "	3 <sup>3</sup> / <sub>4</sub> "	19 <sup>1</sup> / <sub>8</sub> "	6" Extension housing
TH350	30 <sup>11</sup> / <sub>16</sub> "	21 <sup>5</sup> / <sub>8</sub> "	20 <sup>3</sup> / <sub>8</sub> "	3 <sup>3</sup> / <sub>4</sub> "	19 <sup>1</sup> / <sub>8</sub> "	9" Extension housing
TH350	33 <sup>27</sup> / <sub>32</sub> "	21 <sup>5</sup> / <sub>8</sub> "	20 <sup>3</sup> / <sub>8</sub> "	3 <sup>3</sup> / <sub>4</sub> "	19 <sup>1</sup> / <sub>8</sub> "	12" Extension housing
TH400/3L80	28 <sup>3</sup> / <sub>8</sub> "	24 <sup>5</sup> / <sub>16</sub> "	26 <sup>15</sup> / <sub>16</sub> "	4 <sup>1</sup> / <sub>4</sub> "	20"	4" ("C") Short extension housing
TH400/3L80	33 <sup>27</sup> / <sub>32</sub> "	24 <sup>5</sup> / <sub>16</sub> "	27 <sup>15</sup> / <sub>16</sub> "	4 <sup>1</sup> / <sub>4</sub> "	20"	9" ("D") Medium extension housing
TH400/3L80	37 <sup>7</sup> / <sub>8</sub> "	24 <sup>5</sup> / <sub>16</sub> "	27 <sup>21</sup> / <sub>32</sub> "	1 <sup>3</sup> / <sub>4</sub> "	20"	13" Long extension housing
TH700R4/4L60	30 <sup>3</sup> / <sub>4</sub> "	23 <sup>3</sup> / <sub>8</sub> "	22 <sup>1</sup> / <sub>2</sub> "	3 <sup>3</sup> / <sub>4</sub> "	20"	All, except Corvette
TH700R4/4L60	29 <sup>7</sup> / <sub>8</sub> "	23 <sup>3</sup> / <sub>8</sub> "	22 <sup>1</sup> / <sub>2</sub> "	3 <sup>3</sup> / <sub>4</sub> "	20"	Corvette, 1982-1992
TH700R4/4L60	29 <sup>1</sup> / <sub>2</sub> "	23 <sup>3</sup> / <sub>8</sub> "	22 <sup>1</sup> / <sub>2</sub> "	3 <sup>3</sup> / <sub>4</sub> "	20"	With TH350 6" extension housing
TH700R4/4L60	30 <sup>1</sup> / <sub>2</sub> "	23 <sup>3</sup> / <sub>8</sub> "	28"	3 <sup>3</sup> / <sub>4</sub> "	20"	With extension housing 24214689 and using mount on extension housing
TH200R4	27 <sup>11</sup> / <sub>16</sub> "	n/a	27"	3 <sup>3</sup> / <sub>4</sub> "	19 <sup>1</sup> / <sub>8</sub> "	Integral extension housing
4L60E	30 <sup>3</sup> / <sub>4</sub> "	23 <sup>3</sup> / <sub>8</sub> "	22 <sup>1</sup> / <sub>2</sub> "	3 <sup>3</sup> / <sub>4</sub> "	20"	All 1993-1995, except Corvette
4L60E	29 <sup>7</sup> / <sub>8</sub> "	23 <sup>3</sup> / <sub>8</sub> "	22 <sup>1</sup> / <sub>2</sub> "	3 <sup>3</sup> / <sub>4</sub> "	20"	Corvette, 1993-1995
4L60E	30 <sup>3</sup> / <sub>4</sub> "	21 <sup>3</sup> / <sub>4</sub> "	23 <sup>3</sup> / <sub>16</sub> "	3 <sup>3</sup> / <sub>4</sub> "	18 <sup>1</sup> / <sub>4</sub> "	All 1996-later, except Corvette and LS1
4L60E	31 <sup>5</sup> / <sub>32</sub> "	21 <sup>3</sup> / <sub>4</sub> "	23 <sup>19</sup> / <sub>32</sub> "	3 <sup>3</sup> / <sub>4</sub> "	18 <sup>1</sup> / <sub>4</sub> "	LS1, 1998-later
4L60E	n/a	n/a	n/a	n/a	n/a	Corvette transaxle,

						1996-later
4L80E	32 <sup>11</sup> / <sub>16</sub> "	26"	30 <sup>3</sup> / <sub>8</sub> "	4 <sup>1</sup> / <sub>4</sub> "	20"	1991-later, Std 2WD
4L80E	31 <sup>11</sup> / <sub>16</sub> "	26"	30 <sup>3</sup> / <sub>8</sub> "	4 <sup>1</sup> / <sub>4</sub> "	20"	1991-later, HD 2WD
4L80E	33"	26"	30 <sup>3</sup> / <sub>8</sub> "	4 <sup>1</sup> / <sub>4</sub> "	20"	1991-later, HD Long
4L80E	29"	26"	30 <sup>3</sup> / <sub>8</sub> "	n/a	20"	1991-later, 4WD

6190 6L90E dimensions 25 <sup>3</sup>/<sub>4</sub> " bell housing to transmission mount. 29 <sup>1</sup>/<sub>4</sub> " bell housing to end of tail shaft housing.

# HYDRA-MATIC 4L60-E

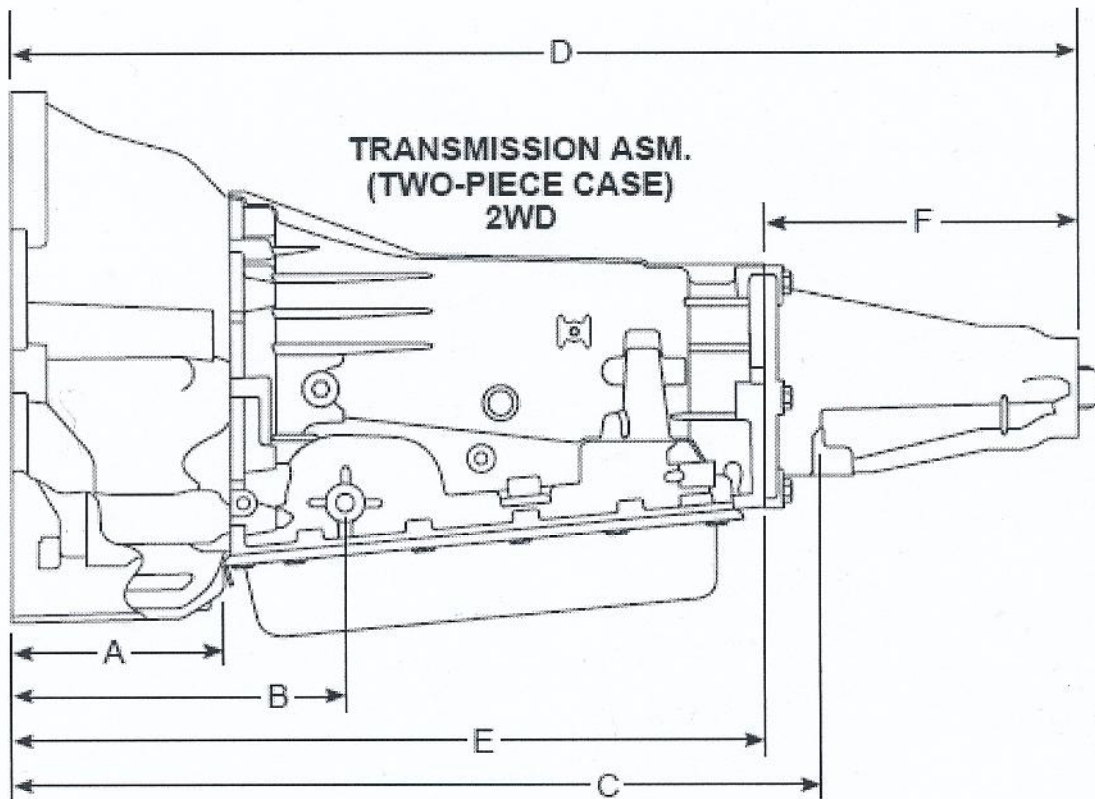

TYPE \ DIM. (mm)	A	B	C	D	E	F
GEN III CASE	176.3	259.2	618.0	794.3	568.0	226.3
2-PC CASE	160.3	243.2	602.0	778.3	552.0	226.3

A = BELL HOUSING LENGTH

B = ENGINE FACE TO MANUAL SHAFT DISTANCE

C = ENGINE FACE TO VEHICLE MOUNT DISTANCE


D = OVERALL LENGTH (ENGINE FACE TO REAR FACE OF EXTENSION)

E = LENGTH OF CASE DIMENSION (APPLICABLE FOR 4WD)


F = LENGTH OF CASE EXTENSION



# HYDRA-MATIC 4L60-E

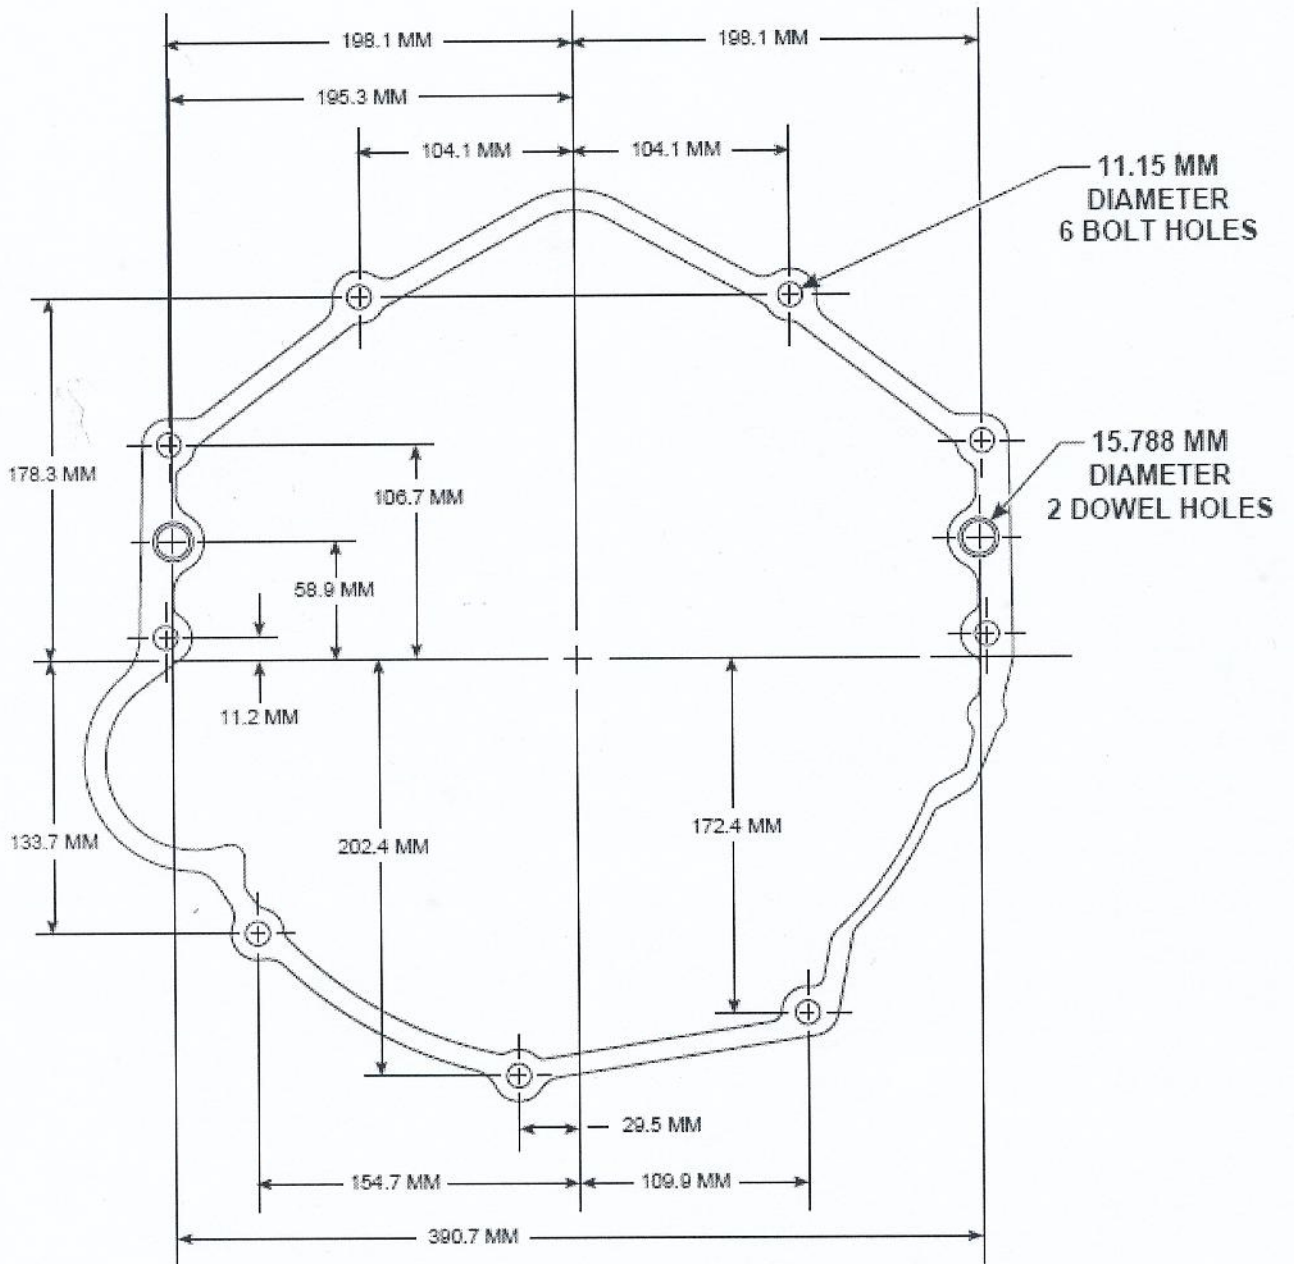

# HYDRA-MATIC 4L60-E

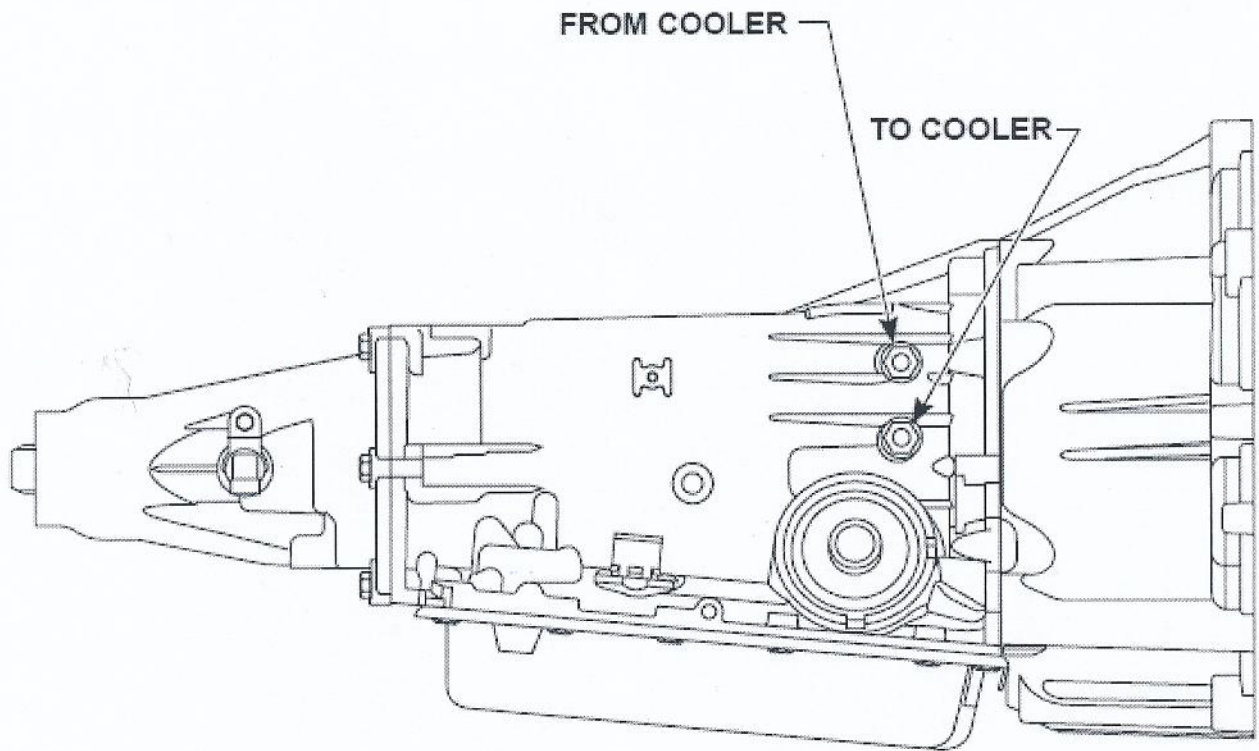

# HYDRA-MATIC 4L60-E

