

Front Floor Console Replacement (D53)

Removal Procedure

1. Remove the front floor console transmission shift opening bezel. Refer to Front Floor Console Transmission Shift Opening Bezel Replacement.
2. Move the front seats to the full rear position to access the front floor console fasteners.

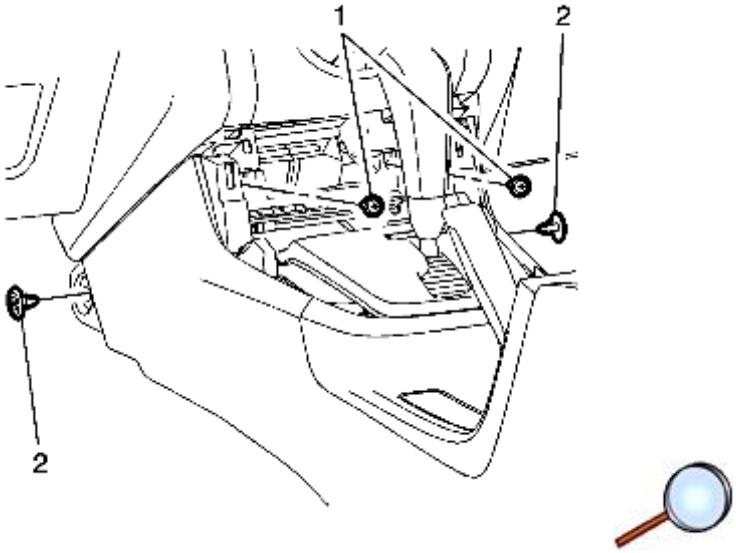


3. Remove the 2 fasteners (1) securing the front floor console assembly to the instrument panel tie bar assembly.
4. Remove the 2 retainers (2) securing the front floor console assembly to the instrument panel center bracket.

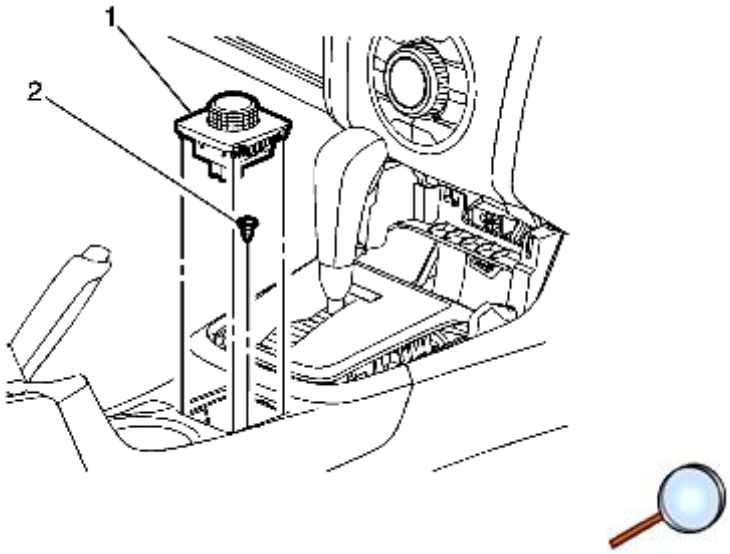


5. Release the retainer tabs securing the front floor console front cover (1) to the front floor console assembly.
6. If applicable, disconnect the electrical connection.
7. Remove the retainer (2) securing the front floor console assembly to the front floor console bracket.

© 2026 General Motors. All rights reserved.

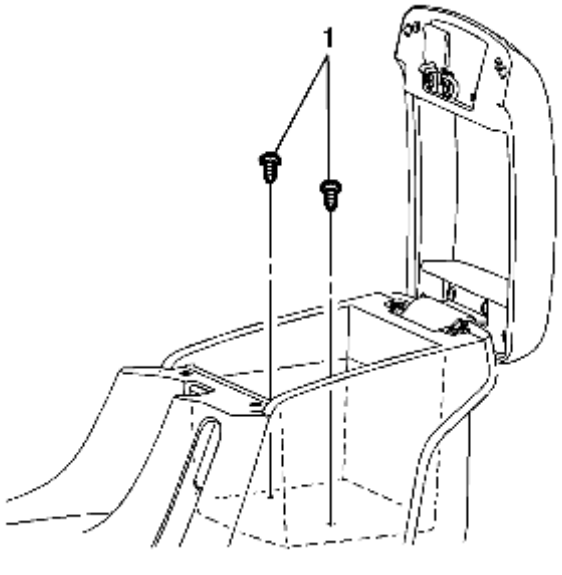


8. Remove the 2 fasteners (1) securing the front floor console assembly to the front floor console rear bracket.

© 2026 General Motors. All rights reserved.

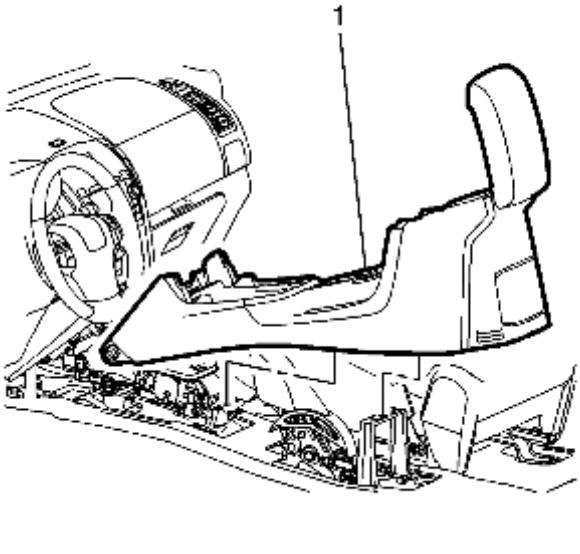


9. Note the location and routing of the instrument panel console harness assembly, to ensure proper reinstallation.
10. Disconnect the electrical connections.
11. Remove the front floor console assembly (1) from the vehicle.

Installation Procedure

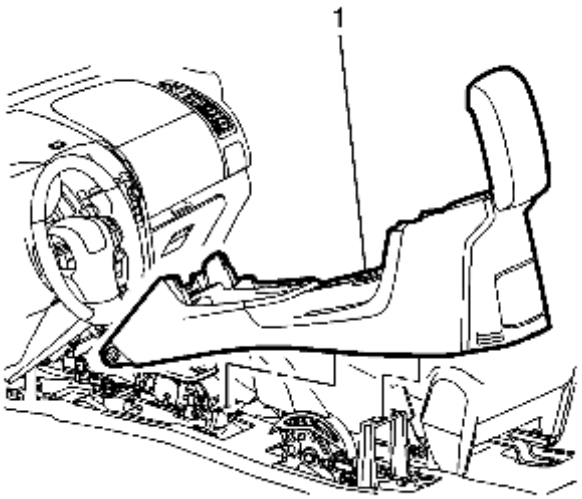


1. Position the front floor console assembly (1) to the front floor console brackets.
2. Reposition the instrument panel console harness to the front floor console assembly (1) as was noted in the removal process and connect the electrical connections.

© 2026 General Motors. All rights reserved.

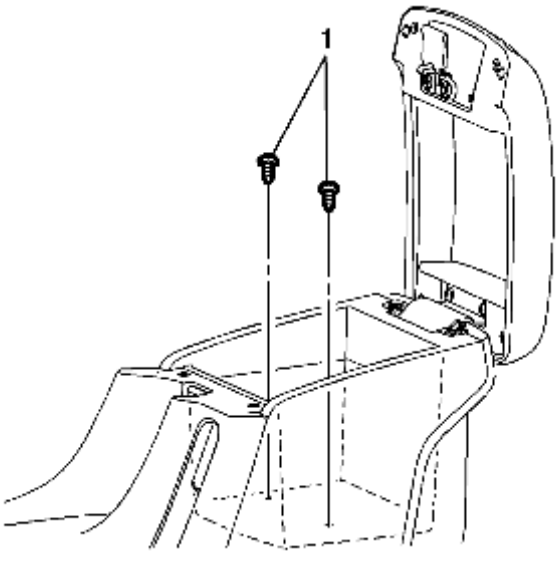


Caution: Refer to Fastener Caution.

3. Install the 2 fasteners (1) securing the front floor console assembly to the front floor console rear bracket and tighten to 4 N•m (35 lb in)

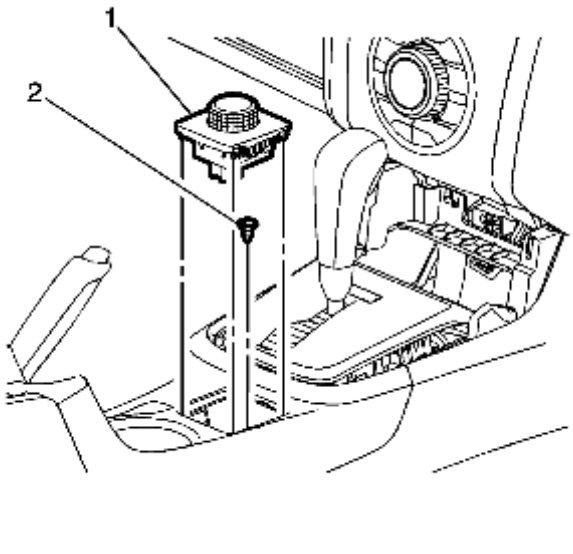

4. Install the retainer (2) securing the front floor console assembly to the front floor console bracket.
5. If applicable, connect the electrical connection.
6. Install the front floor console front cover (1) to the front floor console assembly.

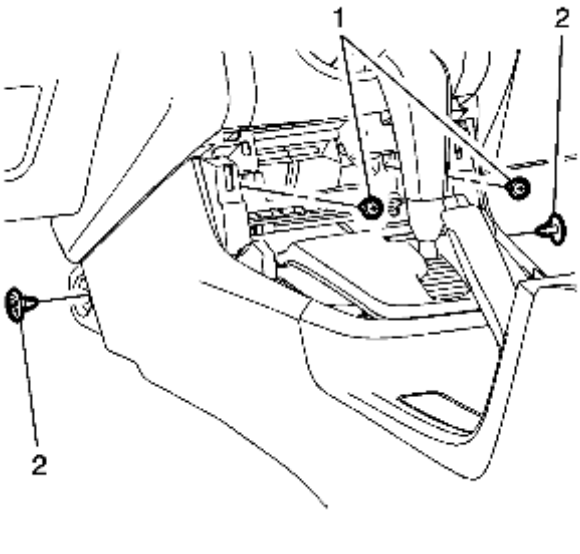

7. Install the 2 fasteners (1) securing the front floor console assembly to the instrument panel tie bar assembly.
8. Install the 2 retainers (2) securing the front floor console assembly to the instrument panel center bracket.
9. Install the front floor console transmission shift opening bezel. Refer to Front Floor Console Transmission Shift Opening Bezel Replacement.

© 2026 General Motors. All rights reserved.