
Transmission Control Replacement

Removal Procedure


1. Remove the front floor console. Front Floor Console Replacement
2. Remove the transmission control lever knob. Transmission Control Lever Knob Replacement



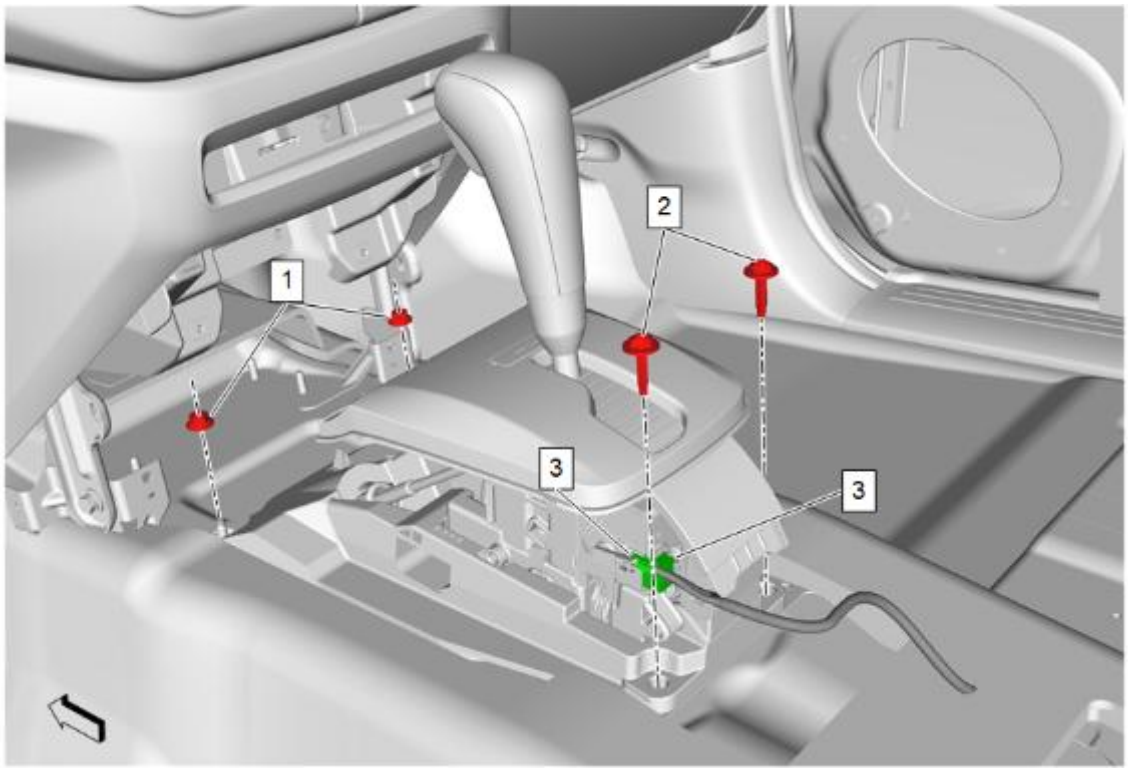


3. Disconnect the electrical connectors (3) from the transmission control assembly.
4. Remove the 2 transmission control nuts (1).
5. Remove the 2 transmission control bolts (2).

© 2026 General Motors. All rights reserved.

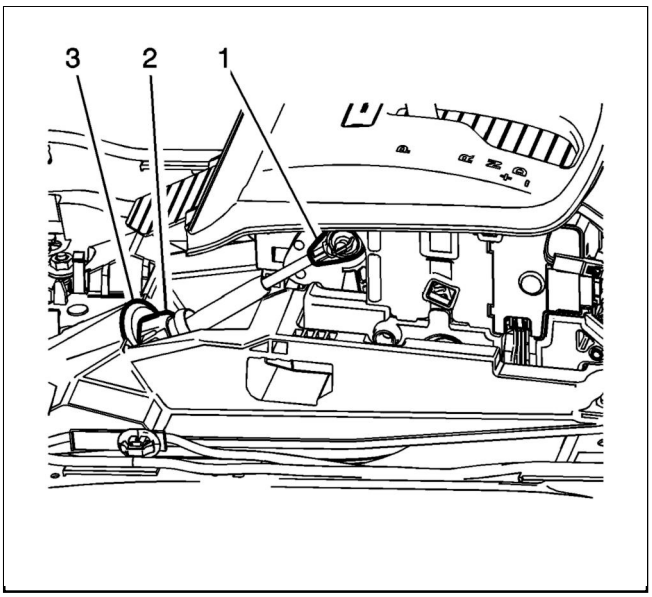

6. Using a flat bladed tool, disconnect the cable terminal (1) from the transmission control shift pin.
7. Compress the two retaining tabs (2) and remove the automatic transmission range selector cable from the transmission control.
8. Disengage the automatic transmission range selector cable grommet (3) to the transmission control assembly.
9. Remove the transmission control from the vehicle.

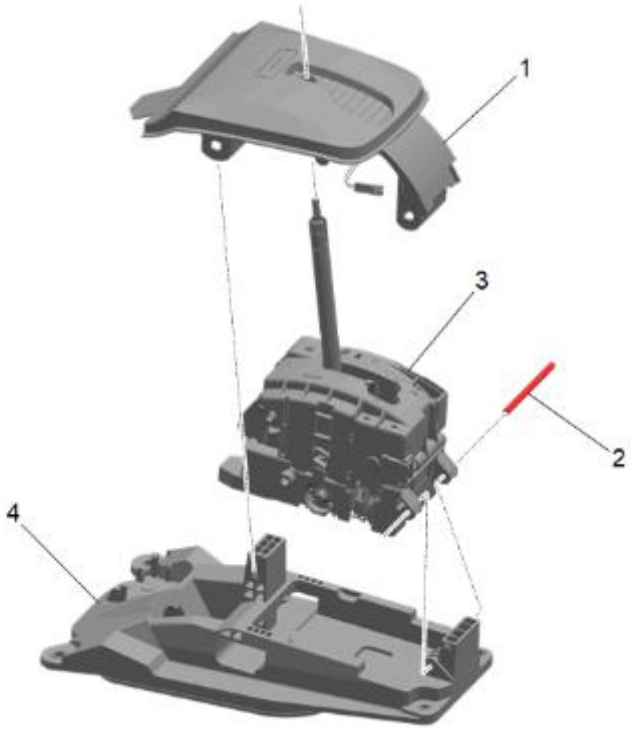


10. Using a flat bladed tool, remove the automatic transmission control opening cover (1).
11. Using a appropriate tool, remove the automatic transmission control bracket pin (2).

© 2026 General Motors. All rights reserved.


12. Remove the automatic transmission control (3) from the automatic transmission control bracket (4).

Installation Procedure

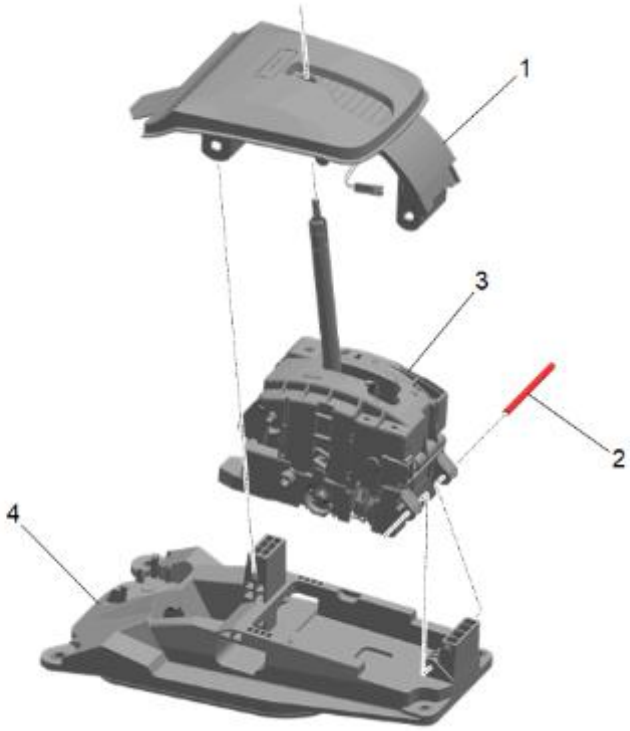


© 2026 General Motors. All rights reserved.

1. Install the automatic transmission control (3) to the automatic transmission control bracket (4).
2. Using a appropriate tool, install the automatic transmission control bracket pin (2).
3. Install the automatic transmission control opening cover (1).

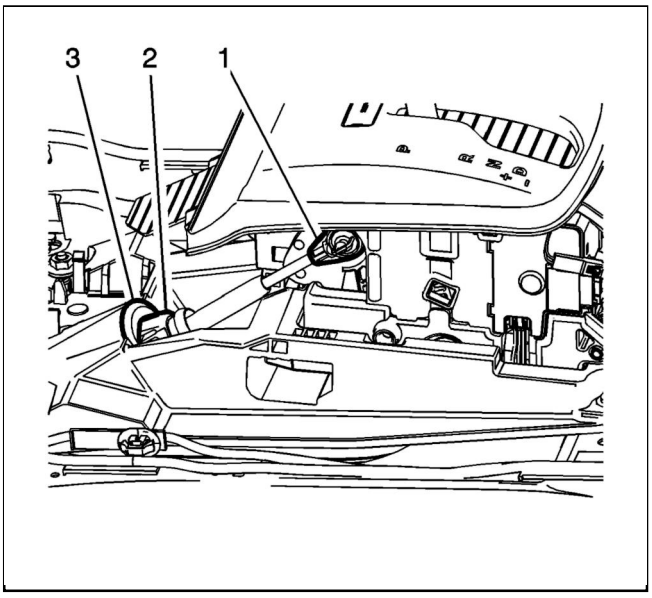

4. Install the automatic transmission range selector cable grommet (3) to the transmission control assembly.
5. Securely seat the cable retainer (2) in the transmission control assembly.

   Warning: After installing the transmission range selector shift cable, pull up and push down on ALL connections to verify that the connections are fully seated and properly engaged. Failure to perform this task can result in the vehicle not being able to shift into PARK causing potential vehicle damage and bodily injury.
6. Connect the cable terminal (1) to the transmission control shift pin.

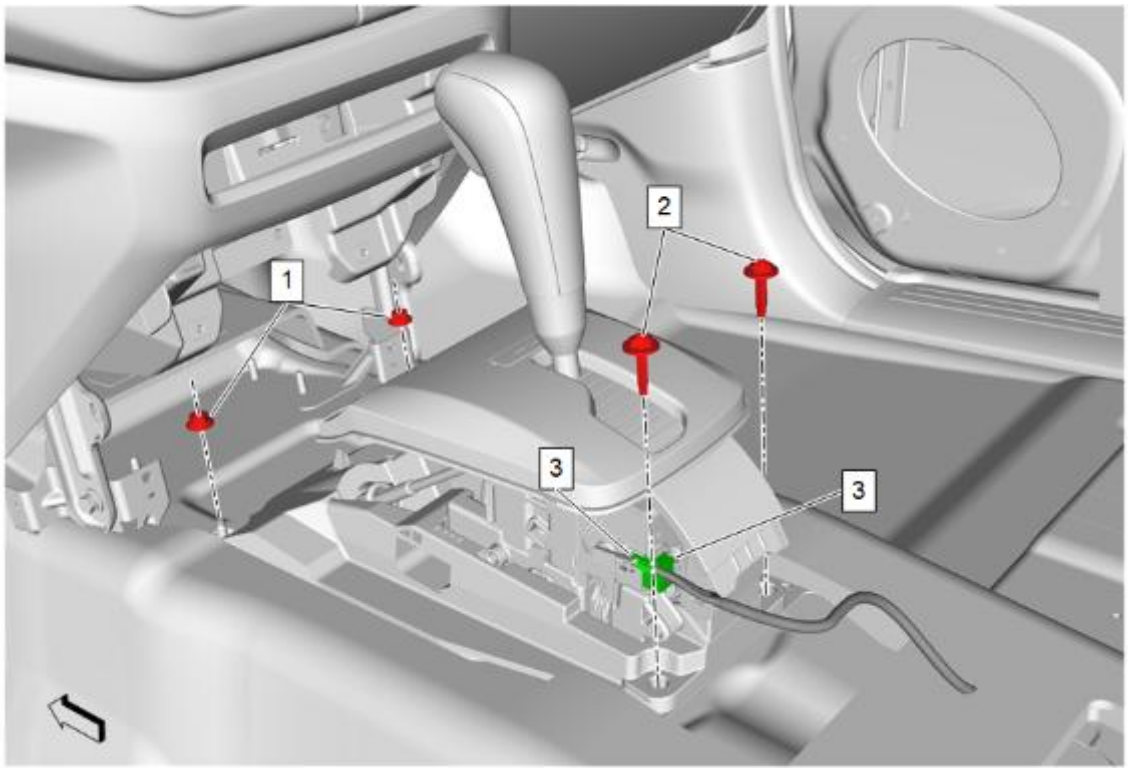



7. Connect the electrical connectors (3) to the transmission control assembly.

   Caution: Refer to Fastener Caution.
8. Install the 2 transmission control nuts (1) and tighten to **2 N•m (18 lb in)**.
9. Install the 2 transmission control bolts (2) and tighten to **6 N•m (53 lb in)**.
10. Install the front floor console. Front Floor Console Replacement
11. Install the transmission control lever knob. Transmission Control Lever Knob Replacement
12. Adjust the automatic transmission range selector cable. Range Selector Lever Cable Adjustment

© 2026 General Motors. All rights reserved.